



VACUUMING YOUR POOL

- 1.** Hook up the hose to the vacuum head. Insert the vacuum adapter (skin-vac) into the other end of the hose. If your hose has a swivel cuff on one end place that end on the vacuum head. Hook the extension pole (telescopic pole) onto the handle of the vacuum head.
- 2.** Place the vacuum head on the bottom of the pool. Take the other end of the hose (w/skim vac attached) and hold it over the return fitting (where the water comes back into the pool.) This will fill the hose with water and keep your pump from getting air into it. Air bubbles will come out of the other end of the hose.
- 3.** Once the air bubbles have quit coming out the other end of the hose, place your hand over the end of the hose and take it over to the skimmer. Drop the skim-vac adapter over the basket. The water flow is now redirected through the vacuum hose and you can vacuum your pool.
- 4.** When you have finished vacuuming the pool, shut the pump off and unhook the vacuum system. Once the vacuum system is unhooked from the skimmer you can turn the pump back on.